



- ★ READ CAREFULLY THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DO NOT DISCARD THIS INSTRUCTION MANUAL UNTIL ALL THE TUBES IN THIS BOX ARE USED UP.

**1. PERFORMANCE:**

Measuring Range	: 10- 200 ppm
and Pump Stroke	: 3 pump strokes
Sampling Time	: 4.5 minutes
Colour Change	: Yellow → Pale blue
Detectable Limit	: 4 ppm
Operating temperature	: 10-40 °C (50-104°F) (Temperature correction is necessary.)
Aspirating Pump	: Model AP-20, AP-20S or 400B

**⚠ CAUTION**

- 1. THE DETECTOR TUBE CONTAINS CHEMICAL REAGENTS.**
- 2. DO NOT TOUCH THESE REAGENTS DIRECTLY ONCE TUBES WERE BROKEN.**
- 3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.**

**NOTICE**

1. USE ONLY WITH PUMP MODELS AP-20, AP-20S or 400B. OTHERWISE, CONSIDERABLE ERROR IN INDICATION MAY OCCUR.
2. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS. (REFER TO ITEM 8. INSPECTION OF ASPIRATING PUMP.) ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
3. DO NOT USE THIS TUBE OUTSIDE THE STATED OPERATING TEMPERATURE RANGE.
4. STORE TUBES IN A COOL AND DARK PLACE (0-25 °C/32-77°F), AND USE BEFORE EXPIRATION DATE PRINTED ON TOP OF THE BOX.
5. PRIOR TO USE, READ CAREFULLY ITEM 9. USER RESPONSIBILITY.
6. READ THE CONCENTRATION IMMEDIATELY AFTER MEASUREMENT.

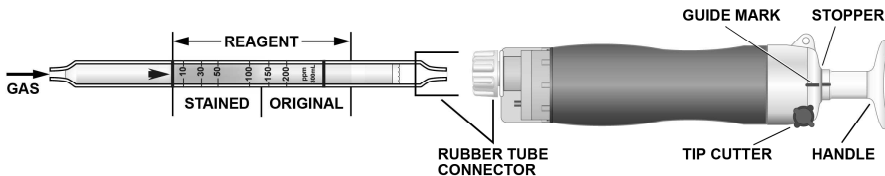
**2. SAMPLING AND MEASUREMENT:**

Fig.1

- ① Break both ends of the detector tube.

**⚠ CAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.**

- ② Insert the detector tube into aspirating pump securely as shown in Fig.1. (Arrow mark shall point to the pump.)
- ③ Align the guide marks on the shaft and stopper of the aspirating pump.
- ④ Pull the pump handle at a full stroke until it locks and wait for 1.5 minutes or until the completion of sampling is confirmed with the flow indicator of the pump. (See descriptions about the flow indicator in the instruction manual of the pump.)
- ⑤ On completion of sampling, read the scale at the maximum point of the stained layer.

**SPECIAL NOTE:**

- I. The scale is calibrated at 20 °C (68°F), 50%R.H. and 1013hPa. Readings obtained in other circumstances should be corrected (REFER TO ITEM 3. CORRECTION FOR AMBIENT CONDITIONS).
- II. When the maximum point of the stained layer is unclear or oblique, read the scale at the centre between the longest and shortest points.

### 3. CORRECTION FOR AMBIENT CONDITIONS:

- ① Temperature; Correct the tube reading by following temperature correction table.

Tube Readings (ppm)	Corrected Concentration (ppm)			
	10 °C (50°F)	20 °C (68°F)	30 °C (86°F)	40 °C (104°F)
200	240	200	160	120
150	180	150	130	100
100	120	100	80	70
50	60	50	40	30
30	36	30	24	18
10	13	10	8	6

- ② Humidity; No correction is necessary.

- ③ Atmospheric Pressure;


$$\text{True concentration} = \frac{\text{Temperature corrected concentration} \times 1013}{\text{Atmospheric pressure (in hPa)}}$$

### 4. INTERFERENCE:

Alcohols, Esters, Ketones or Aromatic hydrocarbons produce a similar or Brown stains and coexistence with them, Propyl acetate give higher readings.

Although coexistence of Paraffinic hydrocarbons or Halogenated hydrocarbons change the whole reagent to pale brown, the reading can be obtained if the top of brown is clear.

### 5. CHEMICAL REACTION IN THE DETECTOR TUBE:



### 6. DISPOSAL OF TUBE:

USED TUBES SHOULD BE DISPOSED CAREFULLY ACCORDING TO RELEVANT REGULATIONS, IF ANY.

### 7. HAZARDOUS AND DANGEROUS PROPERTIES OF BUTYL ACETATE:

TLV - TWA ◆ : 50 ppm

Explosion range in air : More than 1.1%

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2020.

### 8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks;

- ① Insert a sealed and unbroken detector tube into the pump.
- ② Align the guide marks on the shaft and stopper of the pump.
- ③ Pull the handle to a full stroke and wait for 1 minute.
- ④ Unlock the handle and allow it to return slowly into the pump by holding the cylinder and handle securely.

**⚠ CAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY.**

- ⑤ If the handle returns completely to the original position, the performance is satisfactory.

Otherwise, refer to maintenance procedures shown in the pump instruction manual to correct the leakage.

### 9. USER RESPONSIBILITY:

It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-20, AP-20S or 400B aspirating pump, and that detector tubes are not used which are either beyond their expiration date or have a colour change different to that stated in the Performance specifications.

The Manufacturer and Manufacturer's Distributors shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.

※ Product specifications are subject to change without any prior notice.